Dishwasher

Installation Manual

FOR MODELS

DW 14110 NBL00	DW 15120 NBL00	DW 34110 NBL00	DW 35120 NBL00	DW 36111 NBL00
DW 14120 NBL00	DW 15121 NBL00	DW 34120 NBL00	DW 35140 NBL00	DW 36120 NBL00
DW 14140 NBL00	DW 15140 NBL00	DW 34140 NBL00	DW 36100 NBL00	DW 36121 NBL00
DW 15110 NBL00	DW 15141 NBL00	DW 35100 NBL00	DW 36101 NBL00	DW 36140 NBL00
DW 15111 NBL00	DW 34100 NBL00	DW 35110 NBL00	DW 36110 NBL00	DW 36141 NBL00

Blomberg

USA

Installation Manual
For Dishwasher Models

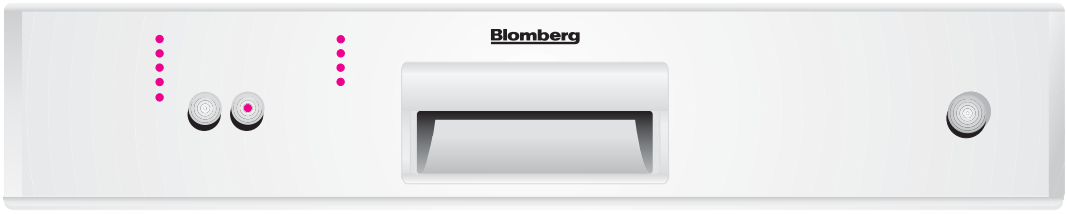

DW 14110 NBL00
DW 14120 NBL00
DW 14140 NBL00

DW 15110 NBL00
DW 15111 NBL00
DW 15120 NBL00

DW 15121 NBL00
DW 15140 NBL00
DW 15141 NBL00

DW 34100 NBL00
DW 34110 NBL00
DW 34120 NBL00
DW 34140 NBL00

DW 35100 NBL00
DW 35110 NBL00
DW 35120 NBL00
DW 35140 NBL00

DW 36100 NBL00
DW 36101 NBL00
DW 36110 NBL00
DW 36111 NBL00

DW 36120 NBL00
DW 36121 NBL00
DW 36140 NBL00
DW 36141 NBL00

To prevent accidents, which could cause serious injury or death, as well as machine damage read these instructions before installation and or use.

Contents

IMPORTANT INSTRUCTIONS....1

TOOLS WHİCH MAY BE NEEDED....3

MATERIALS WHICH MAY BE NEEDED
(Additional materials may be needed)....3

MATERIALS SUPPLIED
(If parts are missing contact your dealer or our customer service department)....4

DISHWASHER SPECIFICATIONS....5

ENCLOSURE PREPARATION....5

ELECTRICAL PREPARATION....5

PREPARATION / INSTALLING MOUNTING BRACKETS....6

ADJUSTING HEIGHT....7

INSTALLING THE FOOT SUPPORTS....7

INSTALLING THE SIDE TRIM STRIPS....8

PREPARING THE WATER CONNECTION....9

INSTALLING THE 90° ELBOW FITTING....9

JUNCTION BOX PREPARATION....9

DRAIN PREPARATION....10

PLACEMENT OF DISHWASHER INTO THE OPENING....11

DRAIN HOSE CONNECTION, WATER SUPPLY & ELECTRICAL CONNECTIONS....11

DRAIN HOSE CONNECTION....11

WATER SUPPLY CONNECTION....12

ELECTRICAL CONNECTION....12

READJUSTING FOOT LEVELS....14

ADJUSTING THE MOVABLE TOE KICK....15

INSTALLING THE OUTER DOOR....16

ADJUSTING DOOR TENSION WITH CUSTOM WOODEN DOOR....20

INSTALLER CHECKLIST....22

FINAL INSTRUCTIONS....22

SELF HELP HINTS....22

INTRODUCTION

Please read this installation manual and particularly the safety instructions completely and carefully. They will save you time and effort and help to ensure optimum dishwasher performance.

Be sure to observe all listed warnings and cautions. Look particularly for the icons with exclamation marks inside. The information icon also will provide important references.

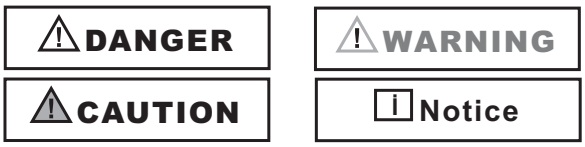

WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in injury. It may also be used to alert against unsafe practices.

Notice: Indicates a potentially hazardous situation which, if not avoided, may result in damage to the dishwasher, the table-ware, the equipment or the environment.

1. IMPORTANT SAFETY INSTRUCTIONS

In addition to these instructions, the dishwasher shall be installed:

- in accordance with all local codes or, in absence of a local code,
- in the United Stated, with the National Electric Code,
- in Canada, with the Canadian Electric Code C22.1-latest edition/Provincial and Municipal codes and/or local codes.

Notice :

Read these installation instructions completely before installing and follow them carefully. Save these installation instructions and pass them on to any future user.

WARNING

When installing the dishwasher, follow basic precautions, including the following:

- The dishwasher installation must be performed in accordance with this installation manual. If you did not receive an installation manual, order it by calling BERNIE 800# or by download from the internet WEB SITE ADDRESS).
- Installation and repair should be performed by a qualified installer. Work by unqualified persons could be dangerous and may void the warranty.
- Do not operate the appliance if damaged, malfunctioning, partially disassembled or if it has missing or broken parts.
- Also consider the safety instructions of the user manual.
- To reduce the risk of electric shock, fire, or injury to persons, the installer must ensure that the dishwasher is completely enclosed at the time of installation.
- Only connect the dishwasher to the power supply when all installation and plumbing work is complete.
- If the dishwasher is installed in a location that experiences freezing temperatures (e.g. in a vacation home, cabin, etc.), you must drain all the water from the dishwasher's interior. Water system ruptures that occur as a result of freezing are not covered by warranty.
- Dishwasher must be secured to adjacent cabinetry using the brackets provided. Failure to do this may cause damage to property or bodily injury.
- Connect to a properly rated, protected and sized power supply circuit to avoid electrical overload. The dishwasher is designed for an electrical supply of 120 V (volts), 60 Hz (hertz), AC, connected to a dishwasher-dedicated, properly grounded electrical circuit with a fuse or breakers rated for 15 amperes. Electrical supply conductors shall be a minimum of # 14 AWG copper wire rated at 75 °C (167 °F) or higher. These requirements must be met to prevent injury and machine damage. Consult a qualified electrician if in doubt.
- Do not use any extension cord or portable outlet device to connect the dishwasher to a power supply.
- Ensure that any plastic wrappings, bags, small pieces etc. are disposed of safely and kept out of the reach of children. Danger of suffocation!
- Remove the door to the washing compartment when removing an old dishwasher from service or discarding it. Ensure that the appliance presents no danger to children while being stored for disposal.
- Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials.

Notice :

- The dishwasher drain hose must be installed with at least 28" (710 mm) off the cabinet floor a drain loop; otherwise the dishwasher may not drain properly.
- This dishwasher is intended for residential use only, and should not be used in commercial establishments.
- New installation - If the dishwasher is a new installation, most of the work must be done before the dishwasher is moved into place.
- Replacement - If the dishwasher is replacing another dishwasher, check the existing dishwasher connections for compatibility with the new dishwasher, and replace parts as necessary.

INSPECT THE DISHWASHER

After unpacking the dishwasher and prior to installation, thoroughly inspect the dishwasher for possible freight or cosmetic damage. Report any damage immediately.

Notice :

- Cosmetic defects must be reported within 10 [The warranty in the use and care manual allows 10 days to report cosmetic defects.] days of installation.
- Do not discard any bags or items that come with the original package until after the entire installation has been complete.

How to contact us
Phone numbers and operating hours (Time Zone)
E-mail/Web Site address
Mailing address

TOOLS WHICH MAY BE NEEDED


Pipe Wrench


Wire Cutter


Drill


Hole Saw


Hammer


Wire Stripper


Tape Measure



Torx Screwdriver


Phillips Screwdriver


Adjustable Wrench


Scot Screwdriver


Scissors


Level


Brush


Pencil

MATERIALS WHICH MAY BE NEEDED

(Additional materials may be required to comply with local codes)

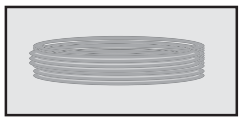

Hot Water Supply Line - Minimum 3/8" O.D. copper tubing or metal braided dishwasher supply line.

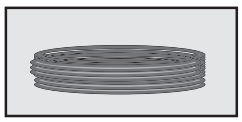

Electrical Supply Cable - Minimum #14AWG, 2 conductors, 1 ground, insulated copper conductors.



90° elbow with 3/8" N.P.T. male threads on one leg, and sized to fit your water supply line (copper tubing/compression fitting, or braided hose) on the other leg.

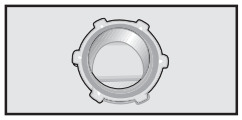

UL listed conduit connector or strain relief.

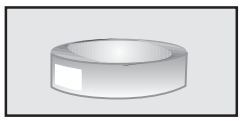

Teflon tape or other pipe thread compound to seal plumbing connections.

Shut-off valve and fittings appropriate for hot water supply line (copper tubing/compression fitting, or braided hose).

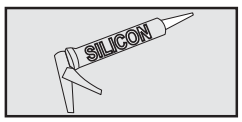

Slicone

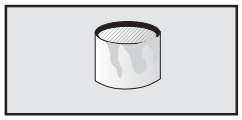

Glue

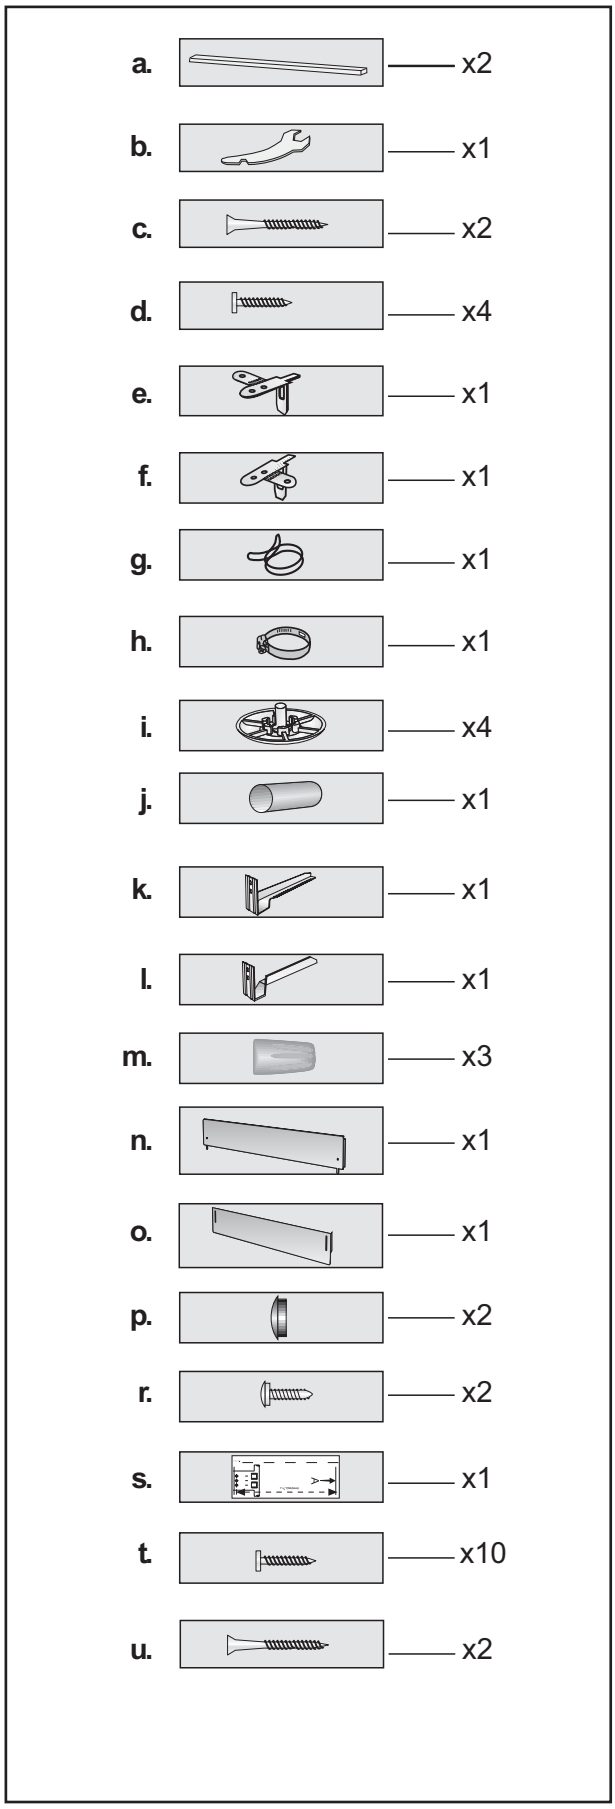

MATERIALS SUPPLIED

PARTS SUPPLIED

Parts for your dishwasher will come in several plastic bags. Check your parts Bags shown to make sure you have all the parts as listed to the left.

MANUAL BAG

The dishwasher comes with a manual bag containing:

- User manual,
- Installation manual and
- Quick reference guide.

DISHWASHER PARTS BAG 1

This dishwasher bag comes with the fallowing parts:

a. Side Trim Strips (Left + Right)
b. Adjusting Wrench
c. Screws Ø $^{3}/_{16}$" x $1^{3}/_{4}$" (Ø 4 mm x 43 mm)
d. Screws Ø $^{1}/_{8}$" x $^{5}/_{8}$" (Ø 3.5 mm x 16 mm)
e. Mounting Bracket Left
f. Mounting Bracket Right
g. Spring Clamp
h. Screw Clamp
i. Short Legs
j. Rubber Connector)
k. Toe Kick Bracket - Left
l. Toe Kick Bracket - Right
m. Wire Nuts
n. Toe Kick (toe kick without slots)
o. Toe Kick
p. Plastic Cap
r. Screws Ø $^{1}/_{8}$" x $^{5}/_{8}$" (Ø 3.5 mm x 16 mm)

DISHWASHER PARTS BAG 2

In addition to the manual bag and the dishwasher parts bag 1 DW 34, DW 35 and DW 36 (dishwasher models which can accept a wooden kitchen door) also come with a door panel installation kit which contain:

s. Template
t. Screws Ø $^{1}/_{8}$" x $^{5}/_{8}$" (Ø 3.5 mm x 16 mm)
u. Screws Ø $^{3}/_{16}$" x $1^{3}/_{4}$" (Ø 4 mm x 43 mm)

DISHWASHER SPECIFICATIONS

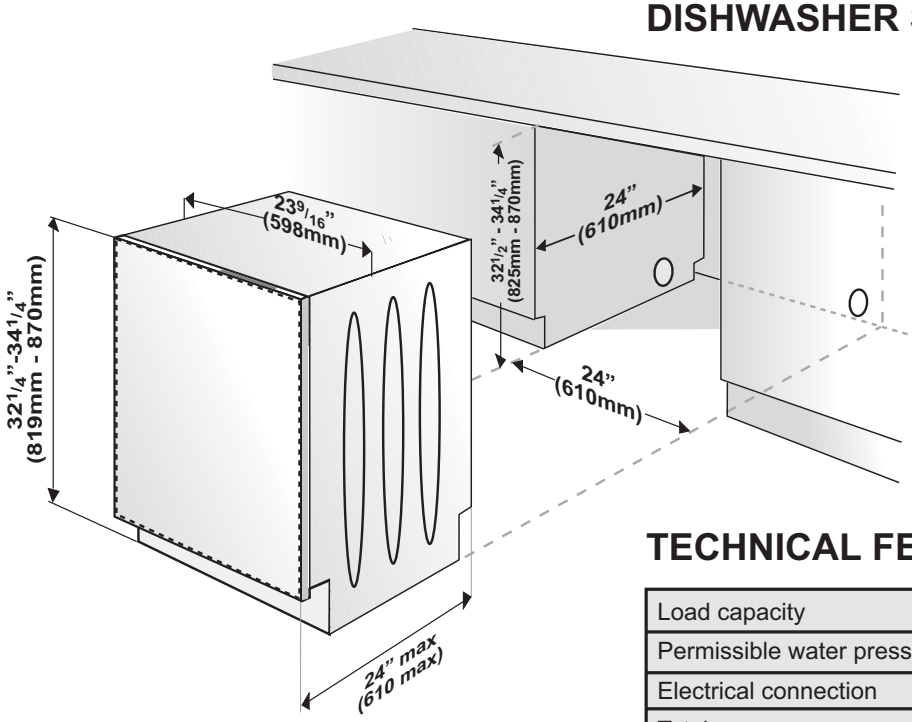

TECHNICAL FEATURES

Load capacity	12 place settings
Permissible water pressure	4.35 - 145 psi (0.3 - 10 bars)
Electrical connection	120 V (volts), 12 A (amps), 60 Hz (hertz)
Total power	1200 W (watts)
Heater power	1000 W (watts)

Notice

Because we continually strive to improve our products, we may change our specifications and design without prior notice. This device corresponds to the following directives:

UL 749 Household Dishwasher directive.

ENCLOSURE PREPARATION

Notice :

- For proper dishwasher operation and appearance ensure that the enclosure has the minimum dimensions shown in the figure above.

ELECTRICAL PREPARATION

⚠WARNING

To avoid electrical shock and/or a fire hazard, make sure electrical work is properly installed. Only qualified electricians should perform electrical work.

Before installation disconnect the power supply to the work area by unplugging the unit, "tripping" the circuit breaker or removing the fuse.

The installer has the responsibility of ensuring that the dishwasher electrical installation is in compliance with all national and local electrical codes and ordinances. The dishwasher is designed for an electrical supply of 120 V, 60 Hz, AC, connected to a dishwasher-dedicated, properly grounded electrical circuit with a fuse or breaker rated for 15 amperes.

⚠WARNING

Electrical supply cords must be a minimum #14AWG copper wire.

Position the cable extending approximately 30" (760 mm) from the enclosure's back (Figure **A**).

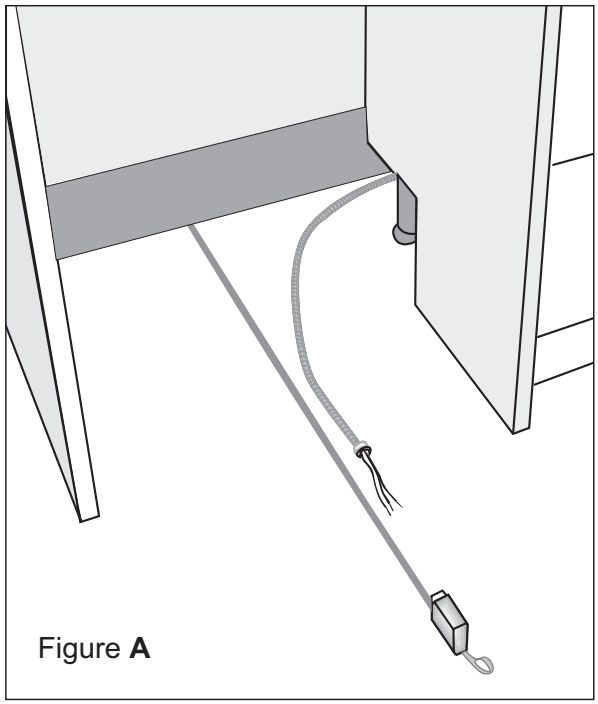

Figure **A**

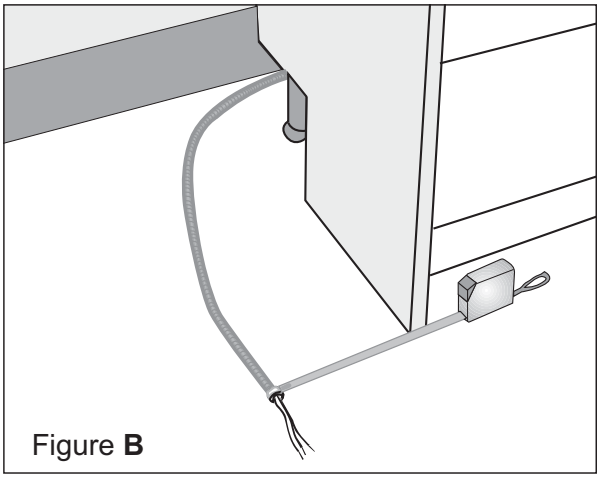

Figure **B**

To the right side position the cable extending approx approximately 5½" (140 mm) (Figure **B**).

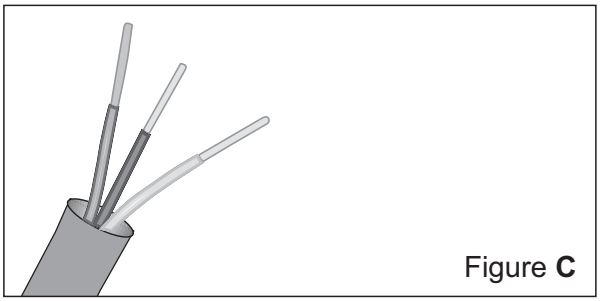

Figure **C**

Remove 2 $^{15}/_{16}$" - 3 $^{15}/_{16}$" (75mm-100mm) of the cable's outer casing, and then remove 3/8"-1/2" (9-13mm) of insulation from each wire. (Figure **C**)

PREPARATION FOR INSTALLING MOUNTING BRACKETS

⚠WARNING

Dishwasher must be secured to adjacent cabinetry using the mounting brackets provided. Failure to do this may cause damage to property or bodily injury.

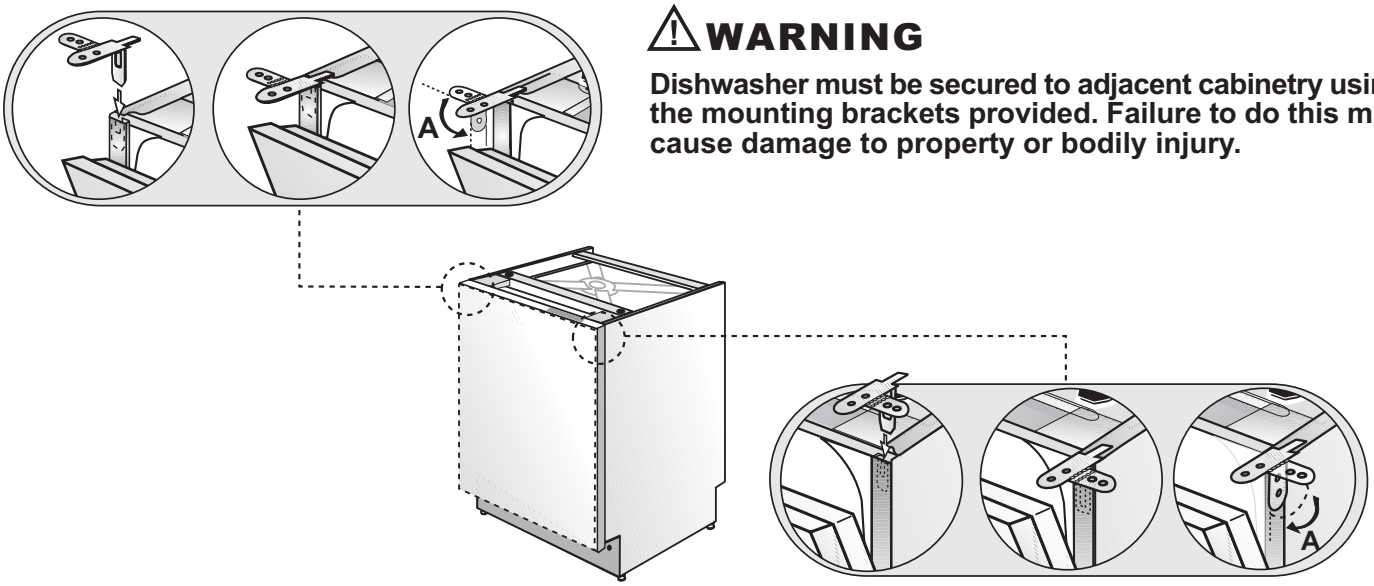

Place the two mounting brackets into the top corners of the dishwasher.

Bend sides of mounting brackets (**A**) In order to fix from sides (if necessary)

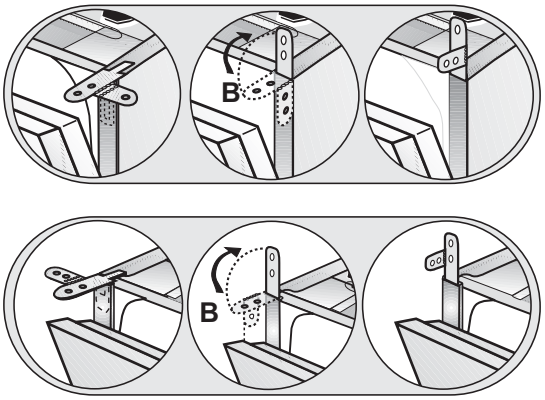

ⓘNotice :

- For these models, DW 34100 NBL00, DW35100 NBL00, DW 36100 NBL00, DW 36101 NBL00 note that an extra bending should be done on the brackets as shown.

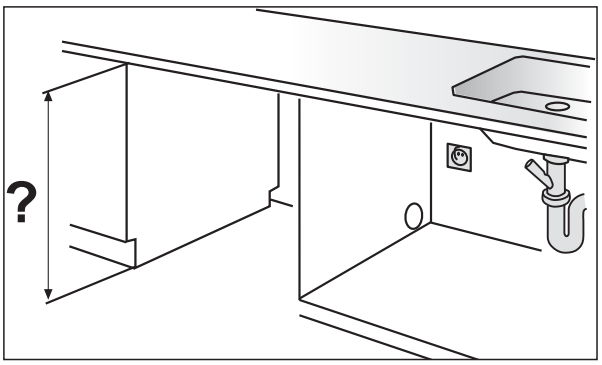

ADJUSTING HEIGHT

Measure the height of the enclosure.

INSTALLING THE FOOT SUPPORTS

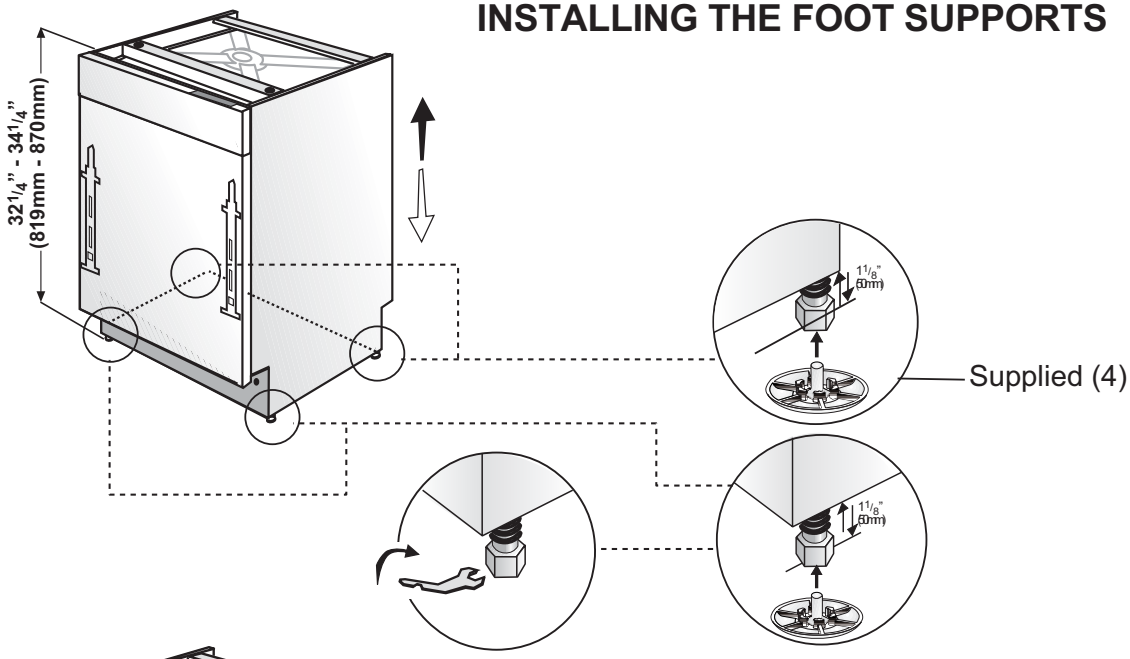

If the height of the enclosure is 33$^{7}/_{16}$" to 34¼" (850 mm - 870 mm) use short supports as shown in the figure.

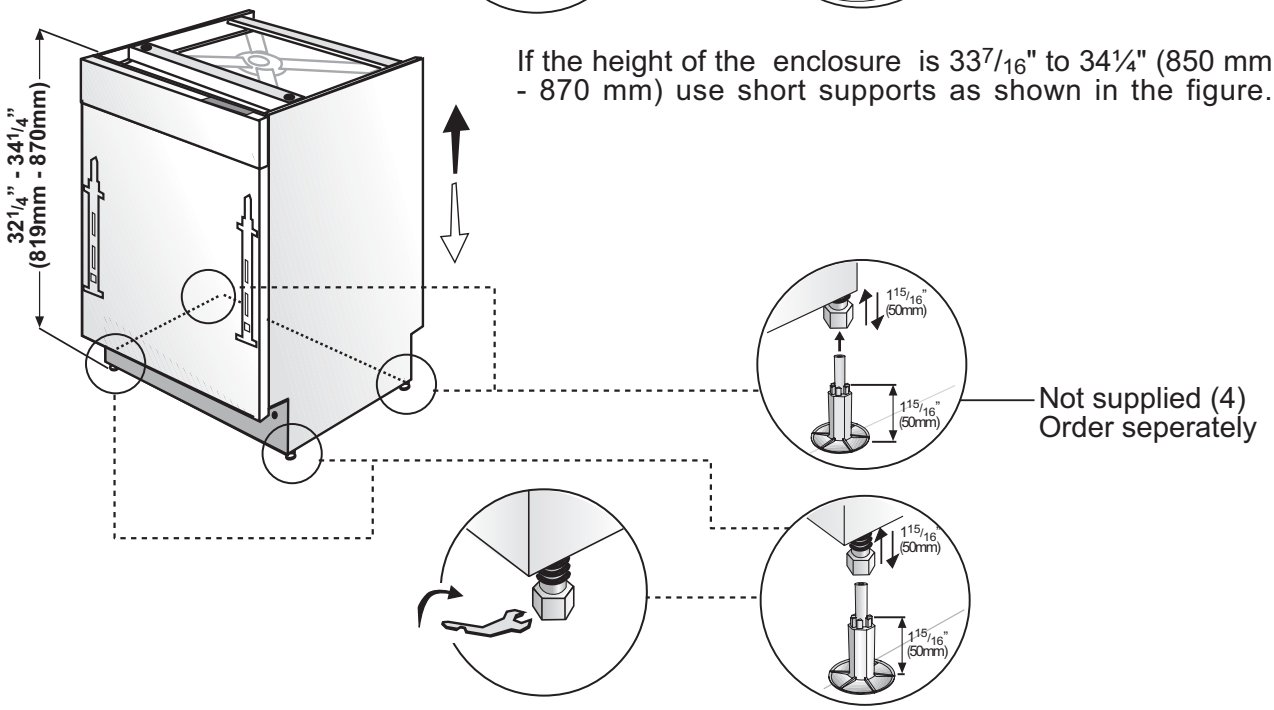

If the height of the enclosure is above 34¼" (870 mm) use long supports as shown in the figure.

Notice :

- If the enclosure height is above 33¼" (819mm) order long legs and toe kick from the service.

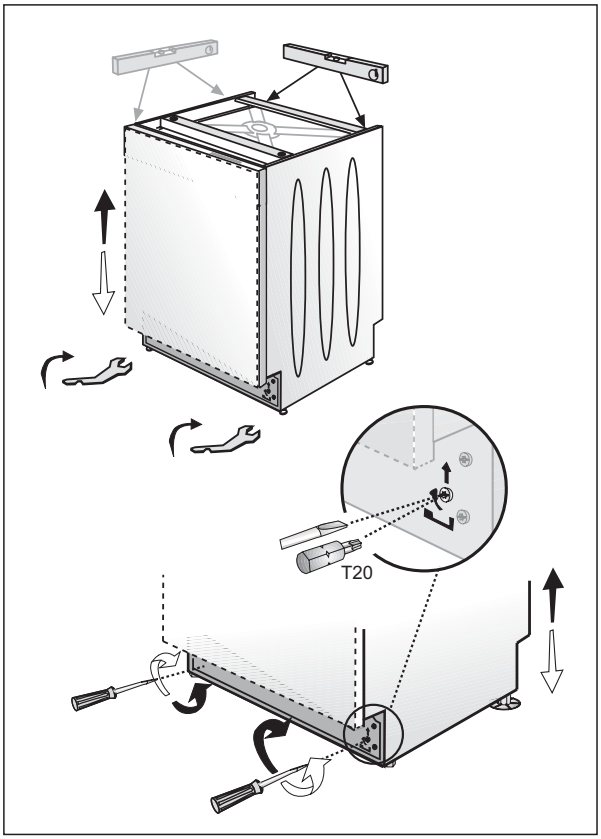

Adjust the front foot level with the adjusting wrench to balance and raise the dishwasher to the enclosure height.

Adjust the rear foot level with a screwdriver to balance and raise the dishwasher to the enclosure height.

Notice :

- Make sure the dishwasher is plumb and notice dishwasher can be placed with a small clearance under the counter top.
- Turning the screwdriver in the direction of the black arrows will bring the dishwasher back feet up.
- Turning the screwdriver in the direction of the white arrows will take the dishwasher rear feet down.

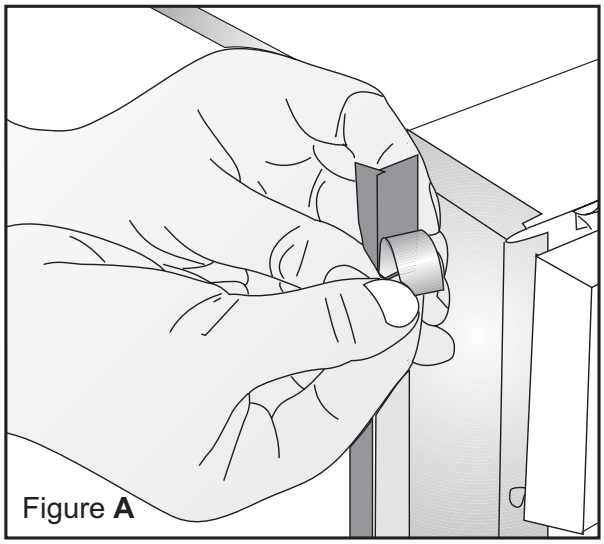

Figure **A**

INSTALLING THE SIDE TRIM STRIPS

1. Remove the adhesive tape (Figure **A**).

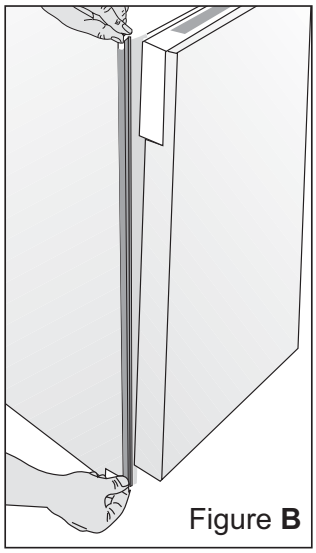

Figure **B**

Place the trim strips on the front edge of the side walls (Figure **B**).

Notice :

- Make sure you use the correct trim strip since there is a left and right side strip. The flexible material should be facing forward (Figure **B**).

PREPARING THE WATER CONNECTION (A)

Install an easily accessible shut-off valve (not supplied) in the water supply line. All solder connections must be made before the water line is connected to the dishwasher's water inlet valve. Water can also be supplied to the dishwasher by using a flexible braided hose line.

Check with your plumbing supply sources for the proper hose and 90° elbow and necessary fittings for the water supply line. This material is not supplied, and must be purchased separately.

⚠WARNING

Installation should be performed by a qualified installer. Work by unqualified persons could be dangerous and may void the warranty.

If the dishwasher is installed in a location that experiences freezing temperatures (e.g. in a vacation home, cabin etc.), you must drain all the water from the dishwasher's interior. Water system ruptures that occur as a result of freezing are not covered by warranty.

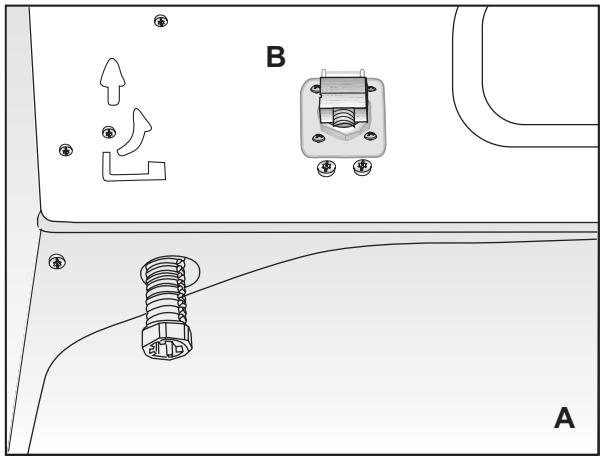

INSTALLING THE 90° ELBOW FITTING (B)

⚠CAUTION

Do not over tighten the 90° elbow. Doing so may damage the water inlet valve and cause a water leak.

If the water supply line is to be copper tubing, make certain that the elbow has a compression fitting. Apply Teflon tape or other pipe sealant when required. Orient the water supply connection downwards as shown in the figure so the water line can be easily pulled underneath or on the side of the dishwasher.

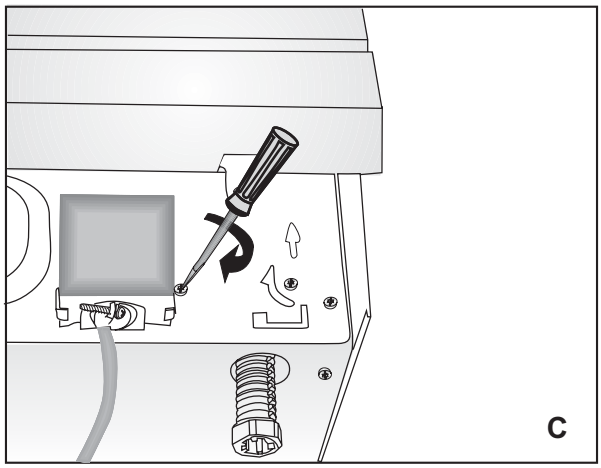

JUNCTION BOX PREPARATION (C)

Remove the junction box cover, by removing the screws as shown in the figure. They will be reinstalled later.

DRAIN PREPARATION

The dishwasher drain hose may be connected to the drain plumbing in one of three ways (Figure **A, B, C**).

Notice :

- Either one of the above methods must be used or the dishwasher will not operate properly.
- A hose that attaches to a sink spray can burst if it is installed on the same water line as the dishwasher. If your sink has one, it is recommended that the hose be disconnected and the hole plugged.
- The total length of the drain hose is 76 3/4" (1950mm.) If a hose extension is required, a drainage hose of equal quality must be used. The maximum length must not exceed 157 1/2" (4000mm) Otherwise, the cleaning process is negatively influenced.

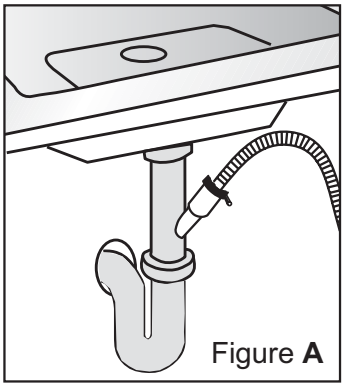

Figure **A**

UNDER THE SINK DRAIN

Install a Y-branch tail pipe. (Figure **A**)

Notice :

- You must add a loop 28" at least (710 mm) above the floor of the cabinet and above the drain connection in the drain hose to prevent waste water from not draining properly, and causing either poor washing results or a bad odor.

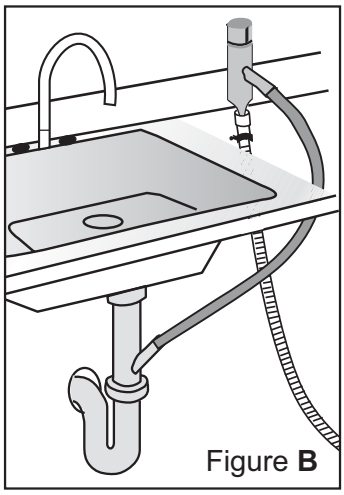

Figure **B**

INSTALLING AN AIR GAP

If the local ordinance requires an air gap (Figure **B**).

Notice :

- Check with local ordinance for type of air gap required.

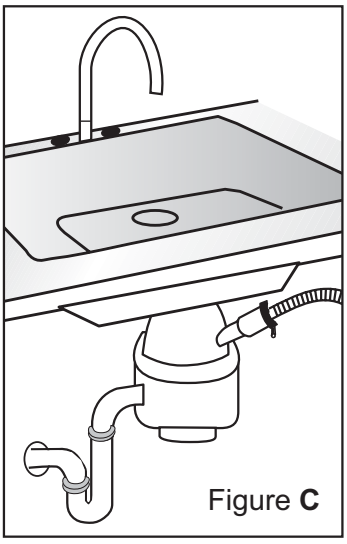

Figure **C**

DISPOSAL

Remove the drain connection plug before attaching the drain hose from the dishwasher.

Every disposal has a hook up for a dishwasher; consult your disposer manual for correct connection. (Figure **C**)

PLACEMENT OF DISHWASHER INTO THE OPENING

Now place the dishwasher into the opening and get ready to connect all hoses and electrical connections.

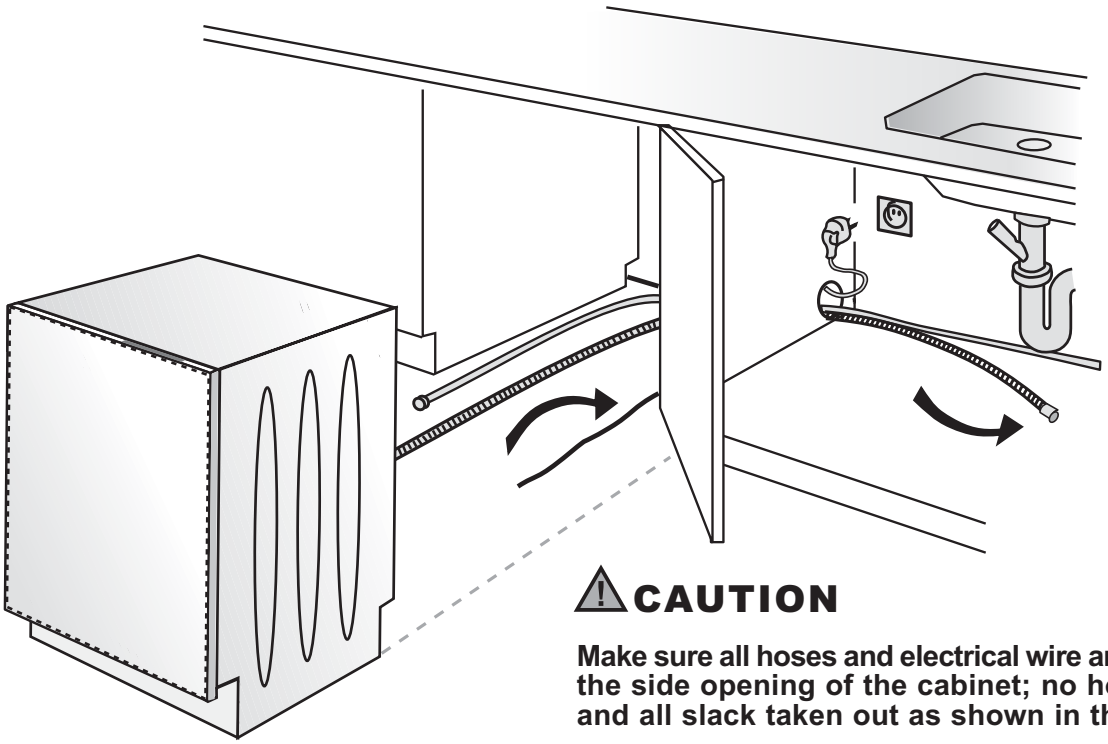

⚠CAUTION

Make sure all hoses and electrical wire are pulled through the side opening of the cabinet; no hoses are kinked and all slack taken out as shown in the above figure.

DRAIN HOSE CONNECTION, WATER SUPPLY & ELECTRICAL CONNECTIONS

DRAIN HOSE CONNECTION

Connect the drain hose to the drain plumbing.

1. Use the supplied rubber connection hose and drain hose clamps to connect the dishwasher drain hose to the plumbing drain connection.
2. Use the spring clamp to secure the rubber connection hose to the dishwasher drain hose. Use the screw clamp to secure the rubber connection hose to the plumbing drain connection.

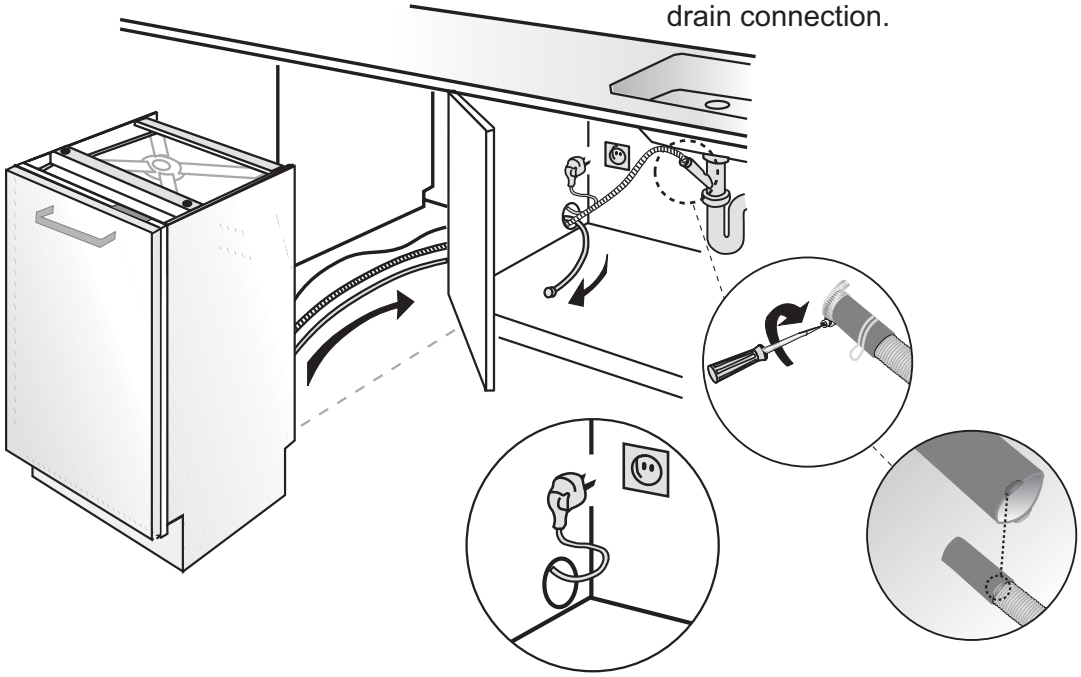

Note that the marks on the rubber connection hose should be on the drain hose side

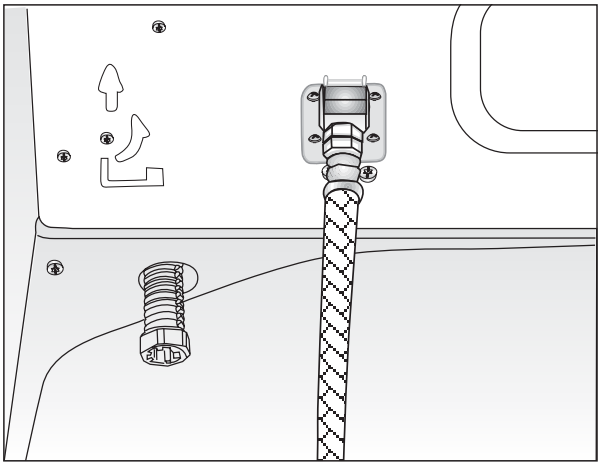

WATER SUPPLY CONNECTION

Water supply may be connected to the dishwasher in one of two ways:

- With metal braided hose.
- With copper tubing.

BRAIDED HOSE/COPPER TUBING

After connections are made turn on the water supply to check for leaks.

⚠ CAUTION

- **Hot water supply line: Use minimum 3/8" O.D. copper tubing or metal braided dishwasher supply line.**
- **Temperatures required for soldering and sweating will damage the dishwasher's water inlet valve so if any such operation is needed, keep the heat source min. $7^{7}/_{8}$" (200 mm) away from the dishwasher's water inlet valve.**
- **There should not be any sharp bends in the water line that may restrict the water flow.**
- **Teflon tape or pipe tread compound must be used for sealing the connection. Before connecting the copper water supply line to the dishwasher, flush it with hot water to clear any foreign material**

ⓘ Notice :

After connections are made turn on the water supply to check for leaks.

ELECTRICAL CONNECTION

⚠ WARNING

- **Make sure the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent injury and machine damage. Consult a qualified electrician if in doubt.**
- **Only connect the dishwasher to the mains when all installation and plumbing work is complete.**
- **Do not use any extension cord or portable outlet device to connect the dishwasher to a power supply.**

Grounding Instructions

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.

⚠WARNING

- **Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded. Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.**

Install a strain relief (not supplied) into the opening on the the kick plate. (Figure **A**)

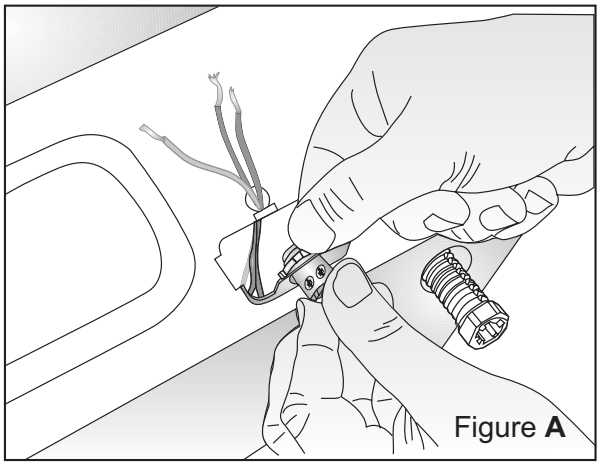

Figure **A**

Pass the electrical supply cable through the strain relief; make sure the strain relief clamps the insulated outer casing of your electrical supply cord and not the wires themselves. Leave $2^{15}/_{16}$" " to $3^{15}/_{16}$" " (75 mm / 100 mm) of insulated wire extending through the strain relief (Figure **B**). Tighten the strain relief screws. (Make sure you can not pull the electrical cord ou of the strain relief.

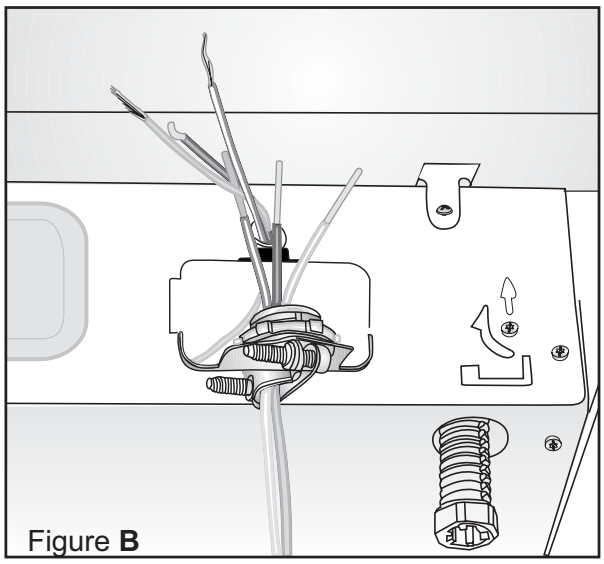

Figure **B**

Do not pre-twist the wires before connecting them with wire nuts

Using the supplied wire nuts, connect the electrical supply wires to the dishwasher's wires, black to black, white to white, and green or bare to green or bare. Make certain that the insulated wires show no bare wire from the bottoms of the wire nuts. Gently tug the wires to make certain they are securely connected. (Figure **C**)

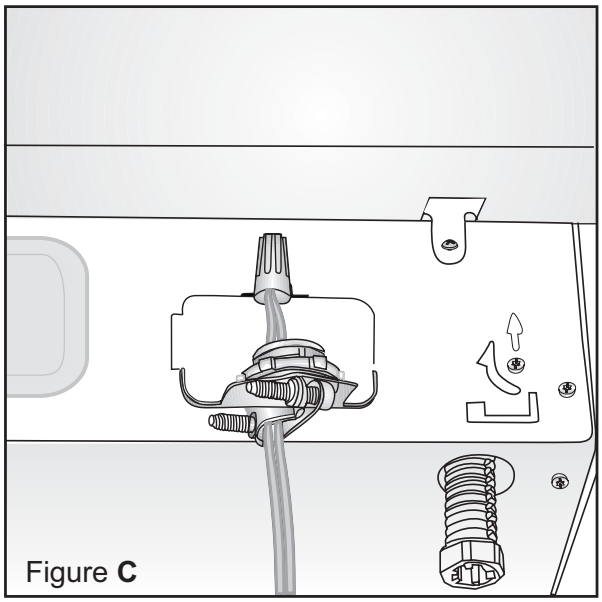

Figure **C**

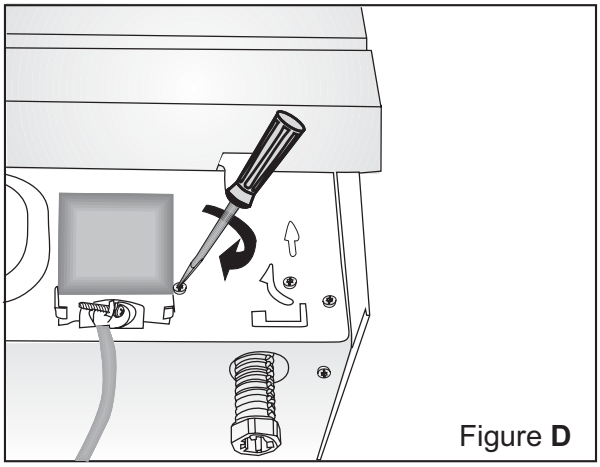

Figure **D**

FASTEN JUNCTION BOX

1. Pull the wires into the junction box. Be sure that the wire nuts do not loosen.
2. Replace the cover on the junction box.
3. Secure the cover with the screws (Figure **D**).

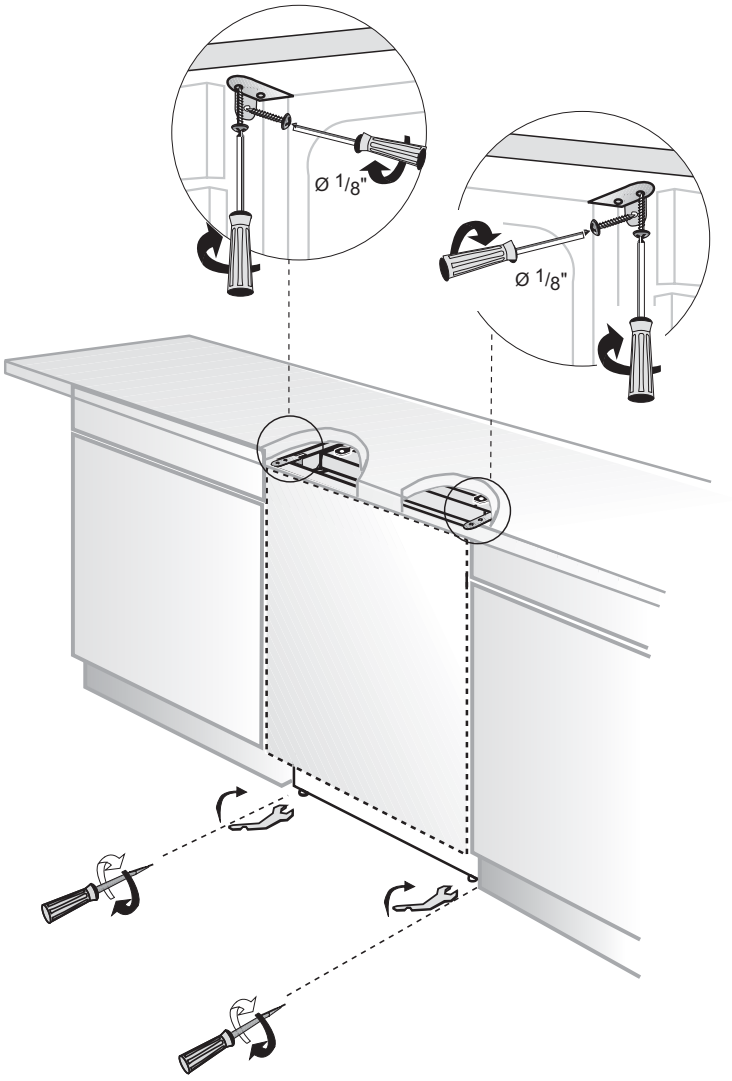

READJUSTING FOOT

Now that the dishwasher is in the cabinet you must readjust the feet to bring the dishwasher up to the required height and attach it underneath the countertop.

1. Readjust the front foot levels with adjusting wrench to balance the dishwasher and raise it up under the countertop, make sure the unit is level.
2. Readjust the rear foot levels with a screwdriver to balance the dishwasher and raise it to the required height using the brackets supplied.
3. Attach the dishwasher underneath the countertop with the four screws supplied (Ø 1/8" x 5/8" - Ø 3.5 mm x 16 mm). Make sure you do not go through the top of the countertop or damage granite.

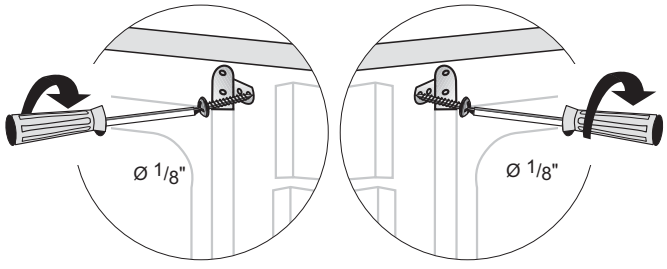

Notice :

- For models, DW 34100 NBL00, DW35100 NBL00, DW 36100 NBL00, DW 36101 NBL00 note that you should keep the total height of the dishwasher 32 1/4" (819mm) max.

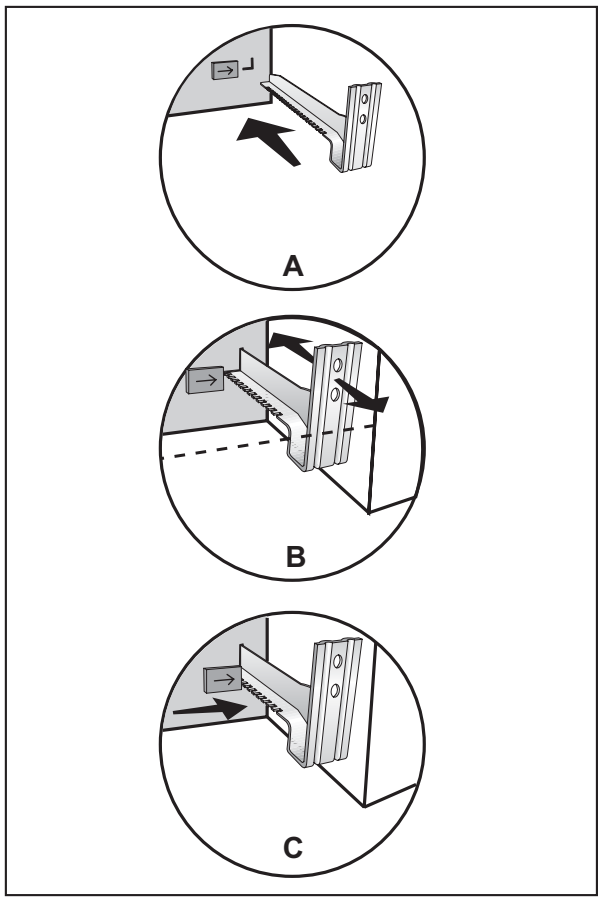

ADJUSTING THE MOVABLE TOE KICK

Now that you have successfully installed the dishwasher, you need to attach the toe kick to the dishwasher. The two piece toe kick can be adjusted to the height and depth needed for your kitchen. Be sure to use the slotted toe kick in the front and the other behind it. They slide into each other.

1. Insert the movable toe kick brackets into the channel (**A**).
2. Make sure that the plastic tab to the left of the “L” opening on the dishwasher has not closed the channel you will push the bracket through.

Notice :

Be sure to notice there is a left and a right bracket.

Adjust the toe kick brackets forward or backwards so that they will align with the kitchen toe kick (**B**).

Lock the toe kick brackets as shown with the plastic tab in the figure C by pushing the plastic tab on the dishwasher into the teeth of the bracket (**C**).

3. Now attach the toe kick to the bracket with the two (Ø $^{1}/_{8}$" x $^{5}/_{8}$” - Ø 3.5 mm x 16) screws and the caps provided as follows.

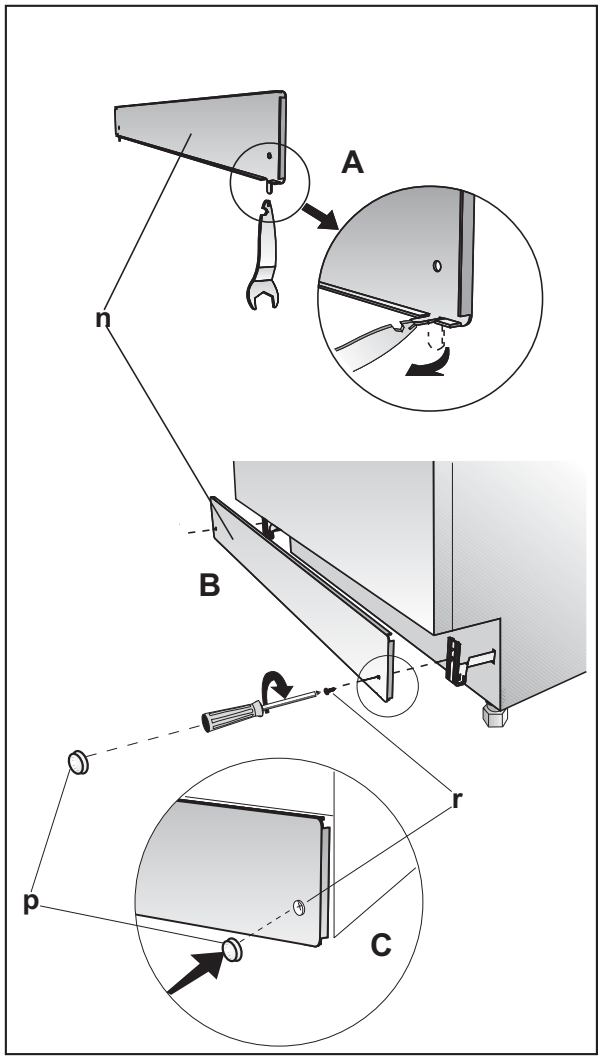

If the enclosure height is below $33^{1}/_{16}$” (840 mm) use only “n” labelled toe kick (toe kick without slots). Installation should be done following the steps illustrated in the Figures A, B and C respectively.

1. Bend tabs on toe kick (n) inwards (A).
2. Secure toe kick to brackets with screws (r) as shown in the supply bags (B).
3. Attach caps (p) as shown in the supply bags (C).

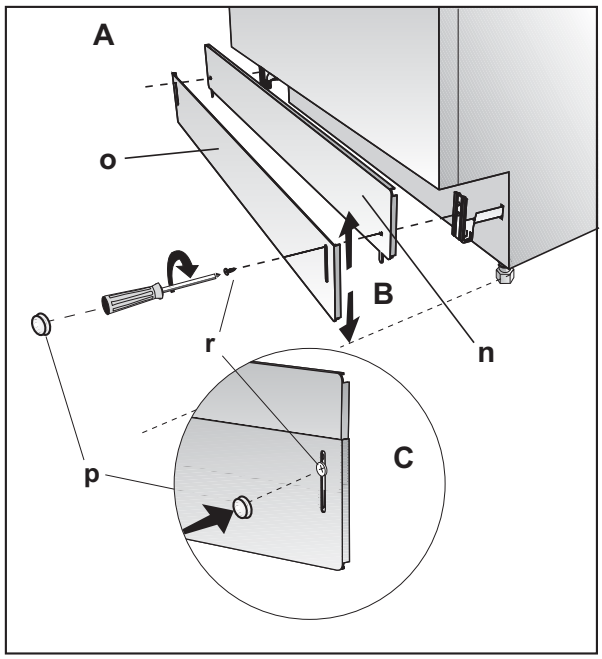

If the enclosure height is above $33^{1}/_{16}$" (840 mm) use "n" and "o" labelled toe kicks together. Make sure the slotted toe kick "o" is on the outside so you can adjust height of the toe kick. Installation should be done following the steps illustrated in the figures A, B and C respectively.

1. Align the toe kick (n) and (o) (A).
2. Secure toe kicks to brackets with screws (r) after adjusting the height of the slotted toe kick (o) (B).
3. Attach caps (p) as shown in the supply bags (C).

INSTALLING THE OUTER DOOR

(DW 34100, DW 35100, DW 36100, DW 36101)

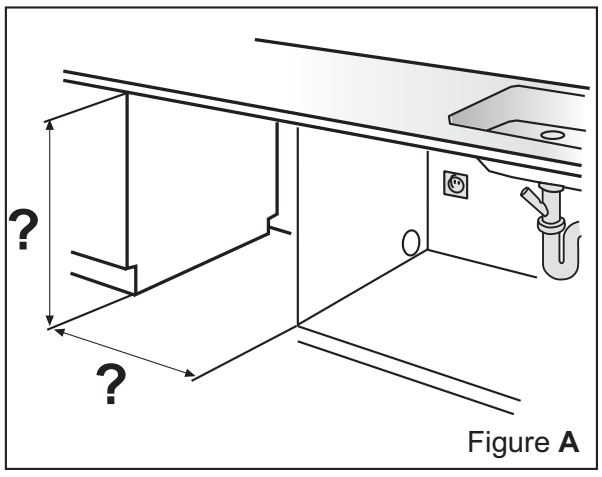

Figure **A**

Measure the height and width of the enclosure (Figure **A**) and the toe kick. Determine how big the wooden door can be for example if the height is $33^{7}/_{8}$'' (860 mm) and if the toe kick is $33^{15}/_{16}$'' (100 mm) the door can not be taller than $29^{15}/_{16}$" (760 mm).

1. Prepare the wooden door with the mounting brackets.

Height : Height of the wooden door 30" (760 mm)
Width : 23 ¼" to 23 ½" (592 mm - 595 mm)
Thickness : ¾ " (19 mm)

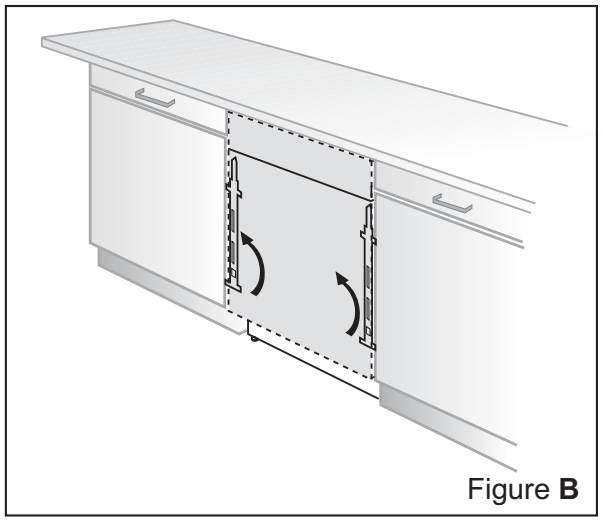
Figure **B**

2. Remove the plastic mounting brackets from the dishwasher (Figure **B**).

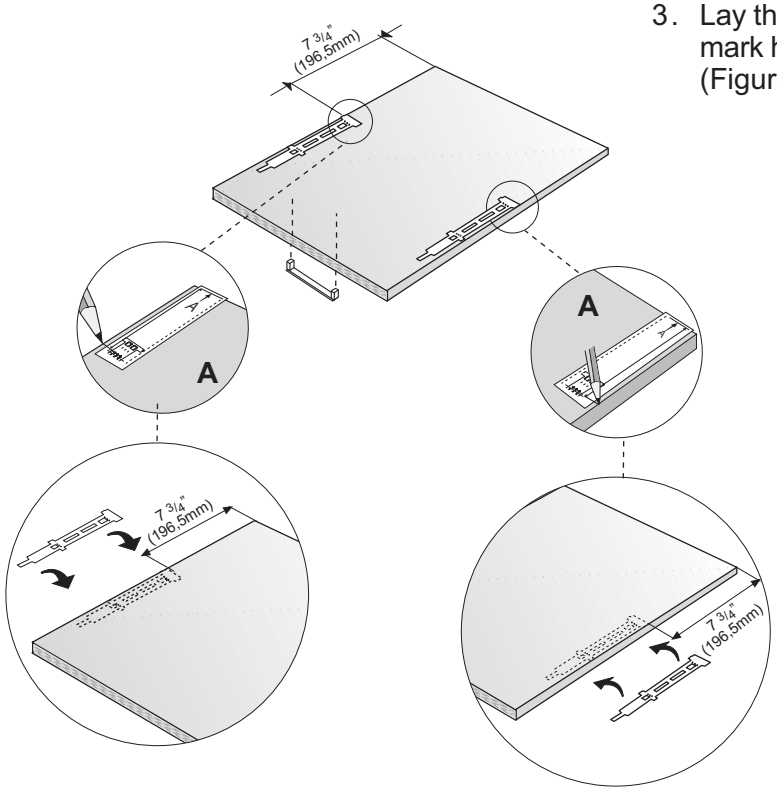

3. Lay the schematic over the door from the bottom up and mark holes on the wooden door as shown in the drawing (Figure **A**).

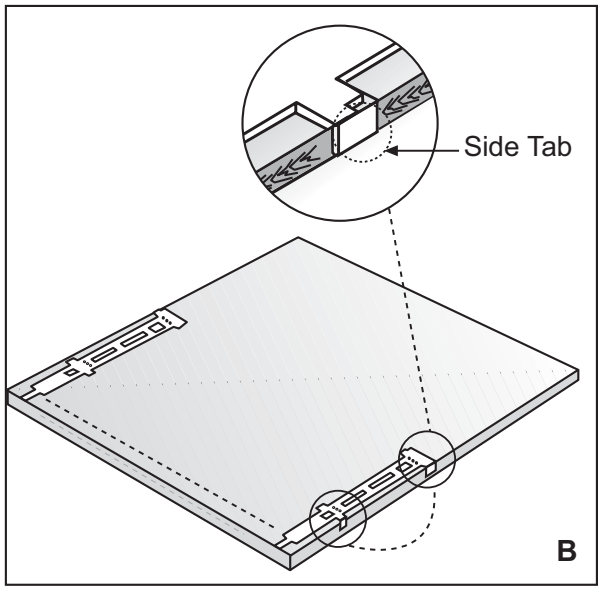

4. Place the plastic mounting brackets over the marked holes and the side tabs must be flush with the edge of the wooden door (Figure **B**).

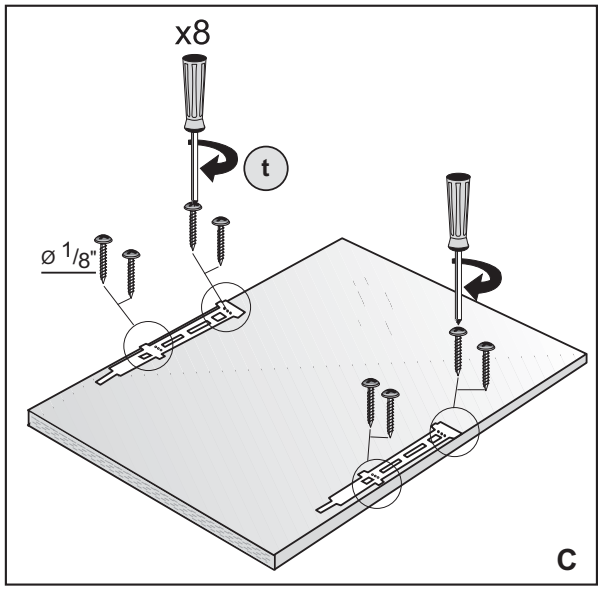

5. Attach the two mounting brackets to the wooden door by eight screws (Ø $^{1}/_{8}$" x $^{5}/_{8}$" (Ø 3.5 mm x 16 mm) (Figure **C**).

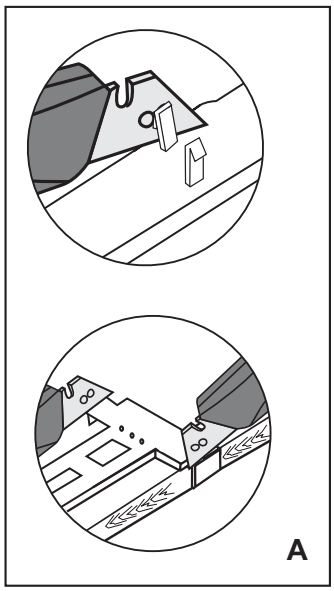

6. Cut the small tabs on the mounting brackets off (Figure **A**).

7. Cut the side tabs on the plastic mounting brackets off.

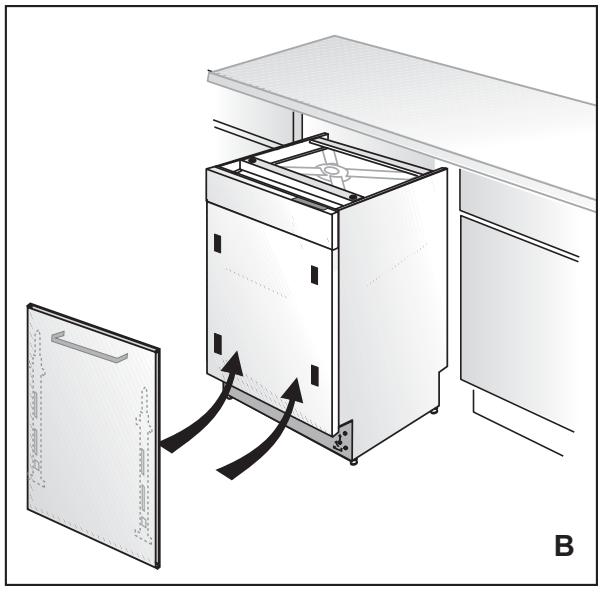

8. Mount the wooden door onto the dishwasher with the plastic mounting brackets which you have attached (Figure **B**).

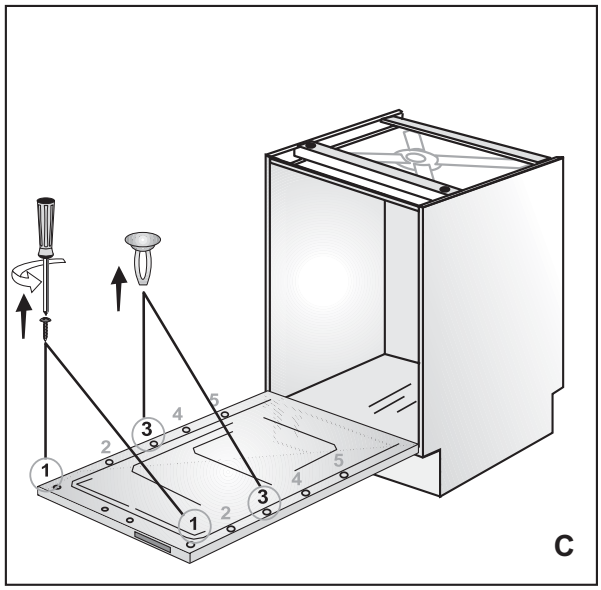

9. Open the door and remove the two caps and two screws inside the door at position 1 and 3 (Figure **C**).

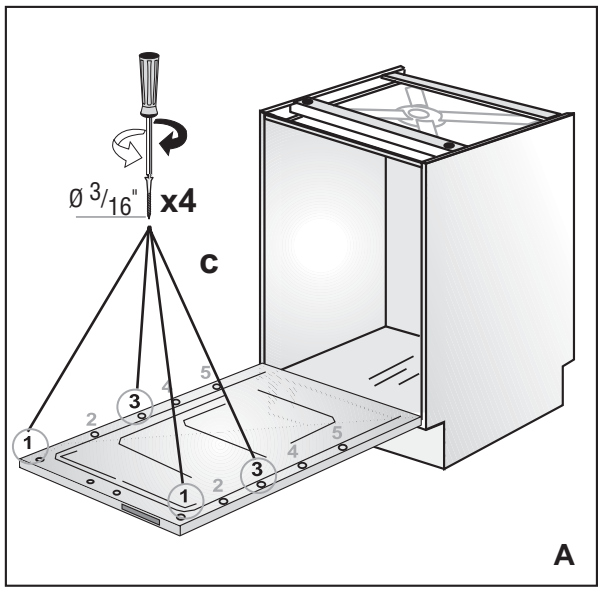

10. Using the four screws Ø $^{3}/_{16}$"x $1^{11}/_{16}$" (Ø 4 mm x 43 mm) provided, attach the wooden door to the dishwasher at position 1 and 3 (Figure **A**).

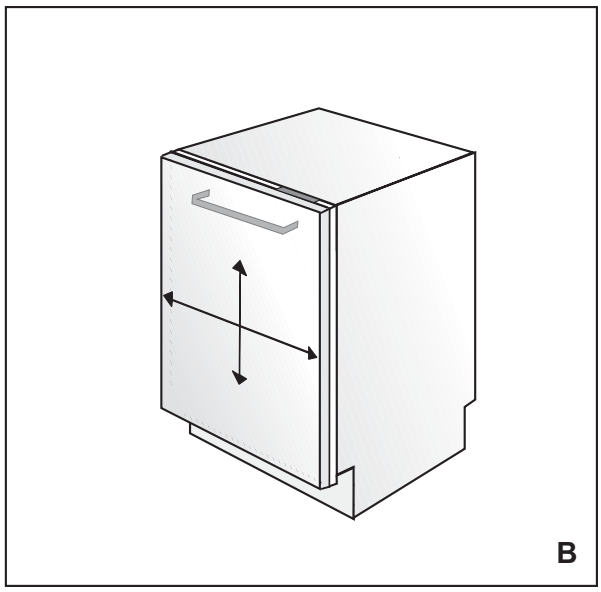

11. Check the position of the wooden door and make sure it is aligned properly (Figure **B**).

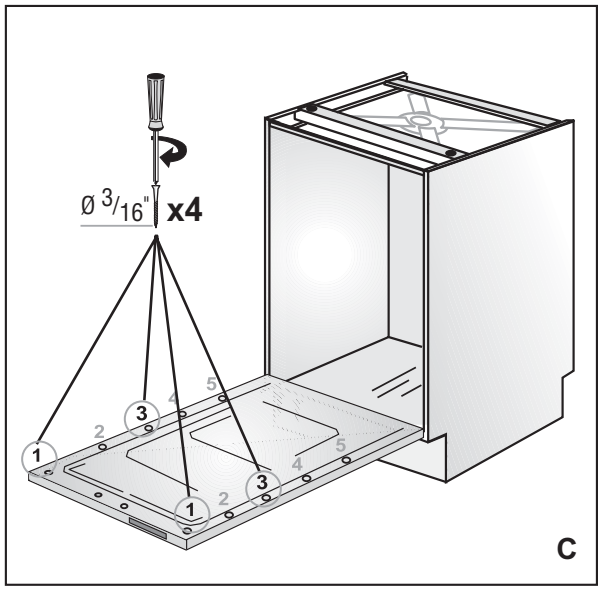

12. Tighten the screws in position 1 and 3 completely after the final alignment (Figure **C**).

10. Check whether the bottom of the door it hits the toe kick of the kitchen cabinet or not (**A**).

13.1 If the door hits the toe kick cut a necessary section out of the toe kick (**B**).

13.2 Apply silicon or sealant to the cut edge of the kitchen cabinet toe kick or paint so it does not absorb moisture.

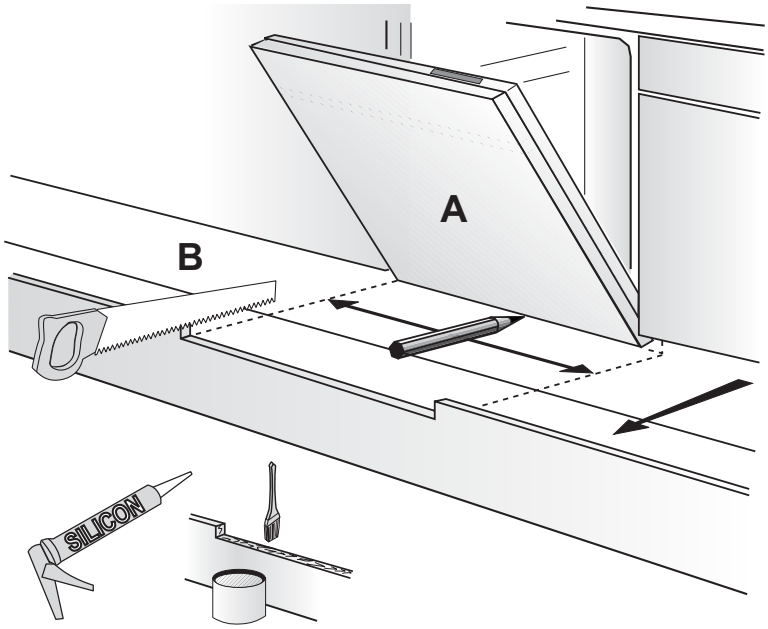

ADJUSTING DOOR TENSION WITH CUSTOM WOODEN DOOR

(DW 34100, DW 35100, DW 36100, DW 36101)

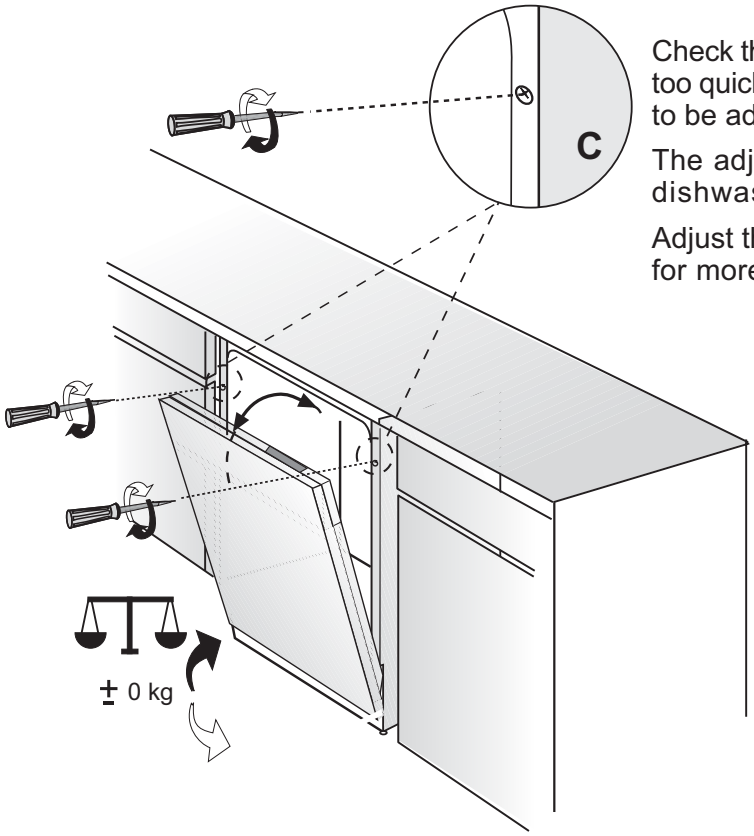

Check the door tension of the dishwasher: If the door closes too quickly or if the door falls open, the spring tension needs to be adjusted.

The adjustment screws can be found on the front of the dishwasher after you open the door (see drawing).

Adjust the spring tension by turning the screw to the right for more weight and to the left for less weight (Figure **C**).

Notice :

If you have a European kitchen or want to install a wooden toe kick to match your kitchen, please refer to one of the two drawings given below. Follow the same instructions on the brackets as for the removable toe kick.

Installation should be done following the steps illustrated in the figures **A**, **B**, **C**, (**D**) respectively.

See also pages 14 - 15

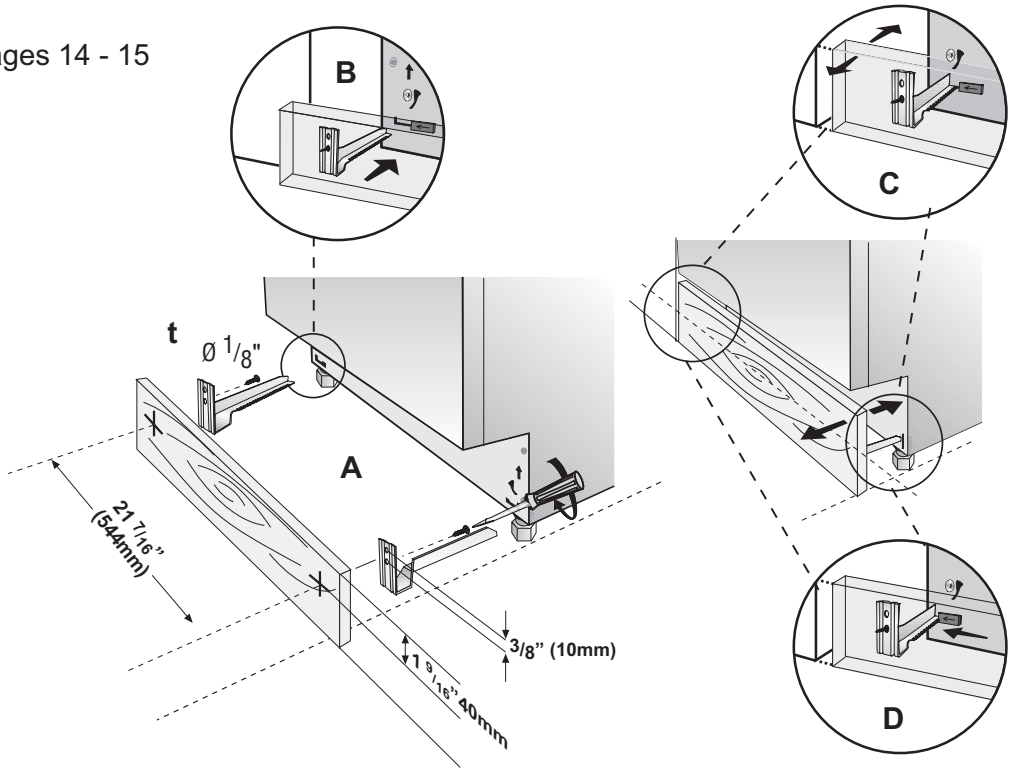

See also page 20

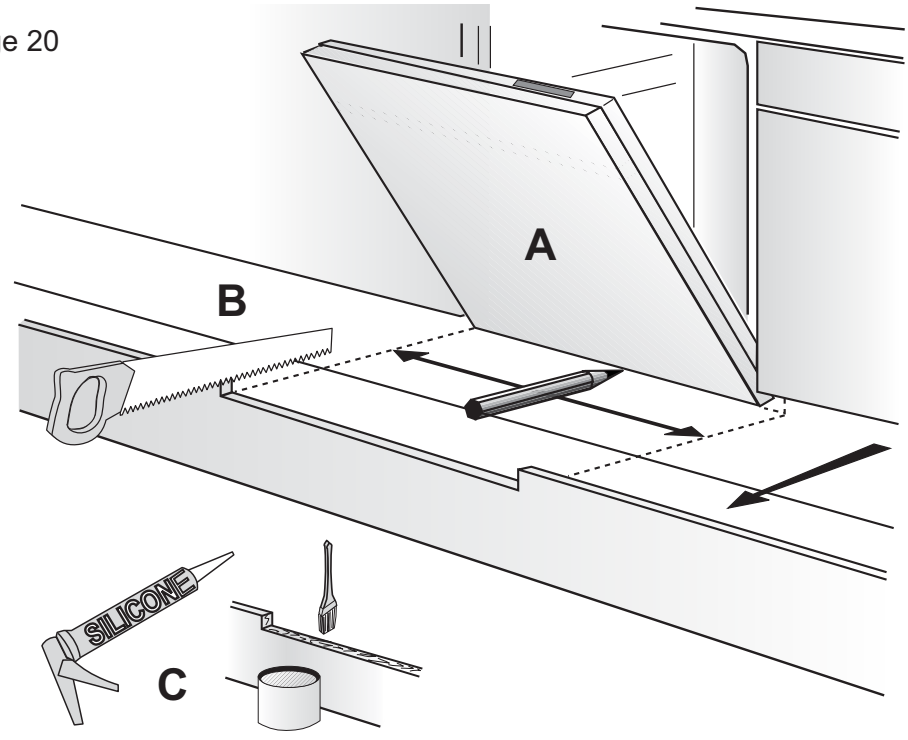

Notice :

The installer is responsible for the dishwasher installation. Incorrect installation is not covered by the warranty.

INSTALLER CHECKLIST

Your installer must have completed and checked the following:

- The dishwasher is square and level.
- The dishwasher is fastened securely to the cabinetry.
- The dishwasher door opens and closes freely. The dishwasher door must close without hitting any cabinetry or counter top.
- The inlet water supply is turned on and checked for leaks.
- The drain hose has been connected and checked for leaks. There must be no kinks, or obstructions in the drain hose.
- The drain hose must be installed with a 28" (710 mm) high drain loop for drain hook-ups without any air removed.
- If the dishwasher drain is hooked up to a garbage disposer, the drain hopper plug must be removed.
- The spray arms are free and rotate freely.
- The rinse cycle has been run.
- The water level will be below the filter screen after the end of the wash program. It is normal to find some water in the drain filter area.
- Set the water softener to the correct water hardness for your area.If the dishwasher drain is connected to a garbage disposal, make sure that the drain/hopper plug has been removed.

FINAL INSTRUCTIONS

1. Press the On/Off button to turn the dishwasher on.
2. Power indicator light comes on.
3. Use the Cycle Select button to choose a washing program.
4. Start the program with the Start/Pause button.
5. Run the dishwasher through one complete cycle. When the progress indicator light “End” lights up, the wash cycle is completed. Use the On/Off button to turn the dishwasher off.

Notice :

If the dishwasher does not operate properly, refer to the self help hints.

SELF HELP HINTS:

The power indicator light doesn’t come on:

- Check to make sure the breaker to the dishwasher is in the on position.
- Check all the wire connections in the junction box are tight and not loose.

No Water is coming into the dishwasher:

- Check to make sure the hot water shut-off is in the ON position.

Water does not drain:

- Make sure drain hose is not kinked or comes out of air gap next to the sink.
- Remove drain hose from disposal making sure plug is removed.

Notice :

- If your dishwasher is not operating properly after following these steps: Contact your dealer to schedule an authorized service agent to inspect your new dishwasher for any functional related failure.
- The manufacturers warranty does not cover installation or customer education service visits.

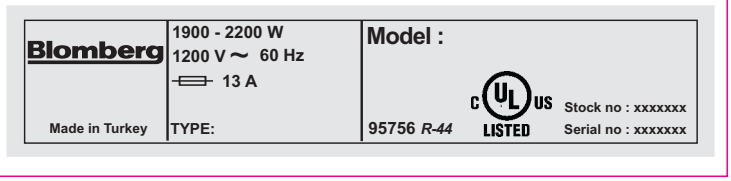

You will find the model and serial number information on the label located on the right-hand side of the inner door of your dishwasher, as shown below:

Notice :

Please make a copy of your invoice and keep it with this manual and register your dishwasher on-line or by post card.